


HiFluxx ST304

Nitrogen Membrane Module

Parker hollow-fibre membrane modules produce nitrogen gas from compressed air to offer a cost-effective, reliable and safe alternative to traditional cylinder or liquid nitrogen gas supplies.

Nitrogen is used as a clean, dry, inert gas primarily for removing oxygen from products and/or processes.

Parker modules can be built into a custom-made nitrogen generator or can be integrated with your (production) process to provide an on-demand, continuous source of nitrogen gas. Gas which can be used in a wide range of industries including food, beverage, pharmaceutical, laboratory, chemical, heat treatment, electronics, transportation, oil & gas, mining and marine.

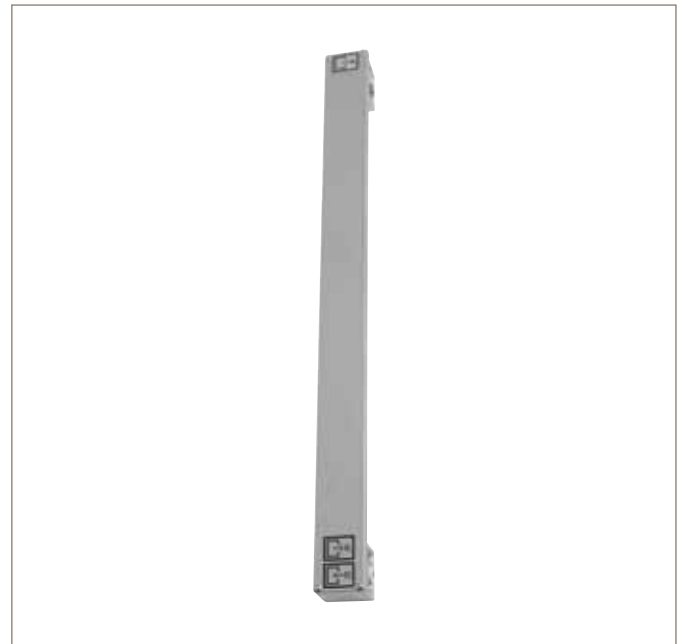

Contact Information:

**Avilo Stikstof en
Persluchtssystemen B.V.**

Seggeweg 2
3237 MK Vierpolders
The Netherlands

Tel: +31 (0)187 48 13 66
Email: info@avilo.nl
Website: www.avilo.nl

Official Parker Distributor

Avilo is a worldwide supplier of Parker membranes.
Always in stock. Fast delivery

Benefits:

- **Less membrane modules needed per nitrogen system**
More nitrogen per fibre is produced from Parker hollow-fibre membranes than any other in the world
- **Use of low pressure standard industrial compressor**
No high pressure compressor needed to obtain required nitrogen flow
- **Energy savings**
Operation at a low pressure requires less energy
- **Reduced CO₂ emissions**
No heater required to open polymer membrane structure, thus reducing the energy consumption
- **Robust fibre**
Most tolerant fibre to particle contamination
- **Large membrane diameter**
Lowest membrane module pressure drop
- **Strong engineering plastic**
Life-expectancy of more than 10 years
- **Factory membrane ageing, pre-delivery**
No performance decrease over time due to fibre ageing
- **Quick start-up time**
Required nitrogen purity is produced instantly, no time needed to heat-up
- **Flexible mounting arrangements**
Can be mounted horizontal or vertical
- **Low noise operation**
Radiated noise generated by membrane technology is extremely low
- **No maintenance required**
No user serviceable parts
- **Small system footprint**
Less modules needed to produce nitrogen requirements



Performance data

| Nitrogen Purity % | Minimum nitrogen ¹ flow rate in m ³ /hr ² (CFM) ² | | | | |
|------------------------|---|-------------|-------------|-------------|-------------|
| | 99 | 98 | 97 | 96 | 95 |
| 4 bar g (58 psi g) | 0.15 (0.09) | 0.27 (0.16) | 0.39 (0.23) | 0.50 (0.29) | 0.62 (0.36) |
| 5 bar g (72.5 psi g) | 0.19 (0.11) | 0.34 (0.2) | 0.48 (0.28) | 0.62 (0.36) | 0.78 (0.46) |
| 6 bar g (87 psi g) | 0.25 (0.15) | 0.45 (0.26) | 0.62 (0.36) | 0.80 (0.47) | 0.98 (0.58) |
| 7 bar g (101.5 psi g) | 0.29 (0.17) | 0.52 (0.31) | 0.73 (0.43) | 0.93 (0.55) | 1.14 (0.67) |
| 8 bar g (116 psi g) | 0.33 (0.19) | 0.60 (0.35) | 0.83 (0.49) | 1.06 (0.62) | 1.31 (0.77) |
| 9 bar g (130.5 psi g) | 0.39 (0.23) | 0.70 (0.41) | 0.95 (0.56) | 1.23 (0.72) | 1.52 (0.89) |
| 10 bar g (145 psi g) | 0.41 (0.24) | 0.75 (0.44) | 1.04 (0.61) | 1.33 (0.78) | 1.64 (0.97) |
| 11 bar g (159.5 psi g) | 0.43 (0.25) | 0.82 (0.48) | 1.15 (0.68) | 1.48 (0.87) | 1.83 (1.08) |
| 12 bar g (174 psi g) | 0.45 (0.26) | 0.89 (0.52) | 1.25 (0.74) | 1.63 (0.96) | 2.02 (1.19) |

| Nitrogen Purity % | Feed-air consumption at minimum nitrogen flow rate in m ³ /hr ² (CFM) ² | | | | |
|------------------------|--|-------------|-------------|-------------|-------------|
| | 99 | 98 | 97 | 96 | 95 |
| 4 bar g (58 psi g) | 1.16 (0.68) | 1.29 (0.76) | 1.43 (0.84) | 1.54 (0.91) | 1.69 (0.99) |
| 5 bar g (72.5 psi g) | 1.44 (0.85) | 1.61 (0.95) | 1.78 (1.05) | 1.92 (1.13) | 2.11 (1.24) |
| 6 bar g (87 psi g) | 1.73 (1.02) | 1.98 (1.17) | 2.18 (1.28) | 2.39 (1.41) | 2.65 (1.56) |
| 7 bar g (101.5 psi g) | 2.02 (1.19) | 2.31 (1.36) | 2.55 (1.5) | 2.79 (1.64) | 3.09 (1.82) |
| 8 bar g (116 psi g) | 2.31 (1.36) | 2.64 (1.55) | 2.91 (1.71) | 3.19 (1.88) | 3.53 (2.08) |
| 9 bar g (130.5 psi g) | 2.70 (1.59) | 3.06 (1.8) | 3.33 (1.96) | 3.69 (2.17) | 4.10 (2.41) |
| 10 bar g (145 psi g) | 2.89 (1.7) | 3.30 (1.94) | 3.64 (2.14) | 3.99 (2.35) | 4.42 (2.6) |
| 11 bar g (159.5 psi g) | 3.45 (2.03) | 3.85 (2.27) | 4.24 (2.5) | 4.58 (2.7) | 4.94 (2.91) |
| 12 bar g (174 psi g) | 3.60 (2.12) | 4.17 (2.45) | 4.63 (2.73) | 5.04 (2.97) | 5.46 (3.21) |

Maximum pressure drop <0.3 bar (4 psi)
 Maximum nitrogen flow rate = minimum flow rate + 30%
 Values between brackets are indicative imperial values

¹ Parker membranes separate oxygen from pressurised air. The composition of the product is determined by measuring the residual oxygen content. The nitrogen content is calculated by subtracting the residual oxygen content from 100 %. Air is composed of nitrogen (78.1%), oxygen (20.9 %), Argon (0.9 %), CO₂ (0.03 %), and some trace inert gases. Therefore it should be born in mind that the value that is normally called the nitrogen content actually is the inert gas content.
² m³/hr (CFM) refers to conditions at 1013 mbar(a) (14.7 psi a) and 20°C (68°F)

Ambient Conditions

| | |
|---------------------|---------------------------------|
| Ambient temperature | +2°C to +50°C (+36°F to +122°F) |
| Ambient pressure | atmospheric |
| Air quality | clean air without contaminants |

Material

| | |
|---------|----------|
| Housing | Aluminum |
|---------|----------|

Services on Request

| |
|------------------------|
| 3D model CAD STEP file |
|------------------------|

Feed-air Conditions

| | |
|-----------------------------------|---|
| Maximum operating pressure | 13.0 bar g (189 psi g) |
| Min. / Max. operating temperature | +2°C to +50°C (+36°F to +122°F) |
| Maximum oil vapour content | <0.01 mg/m ³ (<0.01 ppm (w)) |
| Particles | filtered at 0.01 µm cut off |
| Relative humidity | <100% (non condensing) |

Weight, Dimensions, Connections and Part number

| | |
|---------------------------|--|
| Dimensions H x W x D | 386 x 80 x 63 mm (15.2" x 3.15" x 2.48") |
| Weight | 2.3 kg (5.1 lb) |
| Connection inlet / outlet | G 3/8" female to ISO 228 |
| Vent | G 3/8" female to ISO 228 |
| Dimensional drawing | Refer to K3.1.348 |
| Part Number | 159.003420 |

Flow Rate Corrections

| | |
|--|------------------------|
| Nitrogen flow rate at feed temperatures other than 20°C (68°F) | Use bulletin S3.1.059* |
| Feed-air consumption at feed-air temperatures other than 20°C (68°F) | Use bulletin S3.1.059* |

* version number may vary, make sure to use the most recent version

Note

Parker membrane systems produce both nitrogen and oxygen enriched air. Nitrogen enriched air can cause suffocation and oxygen enriched air causes increased fire hazards. The oxygen enriched air is available at ambient pressure and pressure build-up of enriched oxygen at the outlet must be prevented, otherwise a serious (reversible) decrease in performance will result. The nitrogen enriched air produced should be treated as pressurised air.

For more information please visit www.avilo.nl

Parker has a continuous policy of product development and although the company reserves the right to changes specifications, it attempts to keep customers informed of any alterations.

